# RotaCol® - Goldline PRECISION ANALOG CONTACTLESS ROTARY POSITION SENSOR

Metalcase - 1 Ball bearing Hall effect magnetic


Precision potentiometer replacement

Output : 0 - 5V, 0 - 10V, 4 - 20 mA, 0 - 20 mA, PWM Robust metal aluminium housing with ball bearing

Bush mounting

Shock & vibration proof

Measurement range 0° - 360°

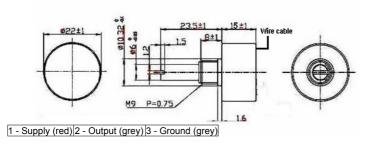

# **ELECTRICAL CHARACTERISTICS**

Electrical angle	0 - 360°, any angle from 0 - 200 - 360					
	programmable in steps of 1°					
Resolution	4096 step (12 bit)					
Signal type	Supply voltage	Output signal				
0505	5V ± 10%	0 - 5V (ratiometric)				
DC05	9 - 30V	0 - 5V				
2410	15 - 30V	0 -10V				
2442	15 - 30V	4 - 20 mA				
2420	15 - 30V	0 - 20 mA				
PWM	5V ± 10%	PWM				
Supply current	< 16 mA					
Independent	0.3%					
linearity tolerance						

# **MECHANICAL CHARACTERISTICS**

Mechanical angle	360° (continuous)
Starting torque	0.5 Ncm
Protection degree	IP 40
Operating temperature	- 40 to +85° C
Operating life (max. radial load 80N)	> 20 million rotations
Max rotating speed	5000 rpm
Weight	22 gm

# **MATERIAL**

Housing	anodized aluminium		
Shaft	stainless steel		
Cable	3 core flat cable 0.2 m		
Bearings	1 precision ball bearing		

# Series 22A RCBL




www.rotacol.info/22arcbl.pdf

#### **FUNCTION PRINCIPLE**

The determination of angular position and signal generation is realised by an intelligent CMOS Hall sensor. A diametrical polarised magnet induces its magnetic field into the sensor. It rotates and provides a conditioned signal to the integrated electronic.

# **ANALOG INTERFACE**

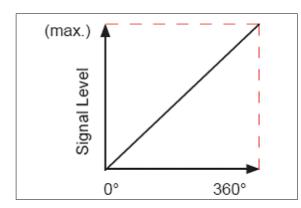

At the output of the sensor a variable voltage or variable current is provided proportional to the position of the shaft / axis over a complete angle range of 360 ° or a subrange. The contactless sensor electronic guarantees a steady signal level and a very low linearity error of 0.3%. With supply voltages of 5VDC ± 10%; 9 - 30VDC; 15 - 30V (24VDC) output signals of 0 - 5VDC; 0 -10VDC; 0 - 20mA; 4 - 20mA at the sensor output are provided. Besides this a large variety of electrical options such as Zero point programming, Centre point programming, Multipoint programming, PWM, 2 Channel redundant are provided.

Refer to electrical options on page 2

# OPTIONS AND ORDERING REFERENCES

	total to diodilotic options on page 2															
Housing diameter	Analog output	RotaCol	Bush version with ball bearing, Long housing, Goldline	Signal	0 - 5V (ratiometric) 0 - 5V 0 - 10V 4 - 20mA 0 - 20mA	Angle and electrical rotational	Angle and Clockwise (CW) Angle and Counter clockwise (CCW)	Programming options for non - effective electrical angle	Delta 1/2 Low level High level Variable level	Programming options	Zero point Center point Multipoint	Pulse width modulation	2 Channel redundant output (only for voltage)	Output connections	3 Core Flat cable (standard) Terminal block	lerminal block
22	A	RC	BL		S 0505 S DC05 S 2410 S 2442 S 2420		xxx CCW	PEX	PE1 PE2 PE3	POX	POZ POC POM	PWM	2C	OCX	OCF	3
22	Α	RC	BL		Sxxxx	xxx C	w / ccw	PEx			POx	PWM	2C		Cx	

Example with description - **22A RCBL S2442 180CW PE1 POZ OCT -** 22mm diameter, analog output, RotaCol sensor, Bush version Long housing Goldline, Signal - 4 - 20mA, 180 angle and clockwise, Delta 1/2, Zero point, Terminal block

# **ELECTRICAL OPTIONS FOR ANALOG VERSION 22A RCBL**

# Non-effective Electrical Angle (PE1) - Delta 1/2

If the electrical effective angle is programmed smaller than 360°, the remaining electrical non-effective angle is divided in two equal parts: high level & low level (Delta 1/2)

# Low level (PE2)

If the electrical effective angle is programmed smaller than 360°, after reaching the maximum, the signal level falls to low level.

# High level (PE3)

If the elecrical angle is programmed smaller than 360°, the signal level remains high after reaching the full level.

# Variable level (PE4)

If the electrical angle is programmed smaller than 360°, remaining electrical non effective angle can be divided into high and low level in any ratio according to customer request.

# **Direction of Rotation (CW/CCW)**

By default the direction of rotation is clockwise (CW). With this option it is also possible to change the direction from clockwise(CW) to counterclockwise (CCW).

# Zero point Programming (POZ)

Mechanical zero point is aligned with marking on the sensor housing. Electrical zero point can be aligned to mechanical zero point. Zero point can be programmed at any offset.

# Center Point Programming (POC)

Effective electrical angle is aligned with the mechanical zero point in such a way that equal effective angles in both rotating directions are achieved. Center point can be programmed at any offset.

# **Multi Point Programming (POM)**

Output characteristics: 3 to 6 rising or falling linear segments. Min and max signal level can be defined within the total electrical angle. First and last linear segment (min/max) is always horizontal.1 to 3 setable calibration points.

# **Pulse Width Modulation (PWM)**

PWM provides a constant carrier frequency which defines high to low ratio. The ratio between high & low corresponds to the signal characteristics. It is in a fixed relation to the angle. Generally, for further signal processing, no A/D converter is required because many microcontrollers already have PWM input (valid only for 0505 output).

# 2 Channel Redundant Output (2C)


This is realized by a Hall sensor chip consisting of 2 galvanically seperated sensing elements. One magnet provides a magnetic field simultaneously for both elements. Both elements can be programmed identically, or channel 2 can also be programmed independently from channel1. (Valid only for 0505, DC05, and 2410 outputs).









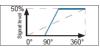









# **MECHANICAL OPTIONS FOR ANALOG VERSION 22A RCBL**

Type / Series	Standard mechanical options	Customized mechanical options
22A RCBL	Terminal Block (OCTH / OCTV)	Special shaft length

# INTERCONNECTIONS

#### Standard Interconnections - 3 Core flat cable

# Other Interconnection options


Terminal block horizontal cable entry (OCTH)

3 sockets

□1.60\*1.60

Terminal block vertical cable entry (OCTV)

3 sockets

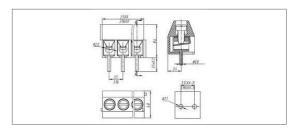

# **European Sales & Technical Support**

MegAuto KG

Am Tummelsgrund 48 D 01156 Dresden, Germany

Tel: +49 351 6587894 0 Fax: +49 351 6587894 9 Email: info@megauto.de / www.megauto.de

a MegAuto Group Company



Div of CONSENSE SENSALL ELECTRONICS PVT LTD. 32, Electronic Sadan - I, MIDC, Bhosari, Pune - 411026, INDIA Tel : +91 20 30681190 , +91 20 30626126 Email: mail@megacraft.net / www.sensall.info

Worldwide Technical & Marketing Center

a MegAuto Group Company

MegAuto International





